 




# COMPACT INTERCOM\_K monitor

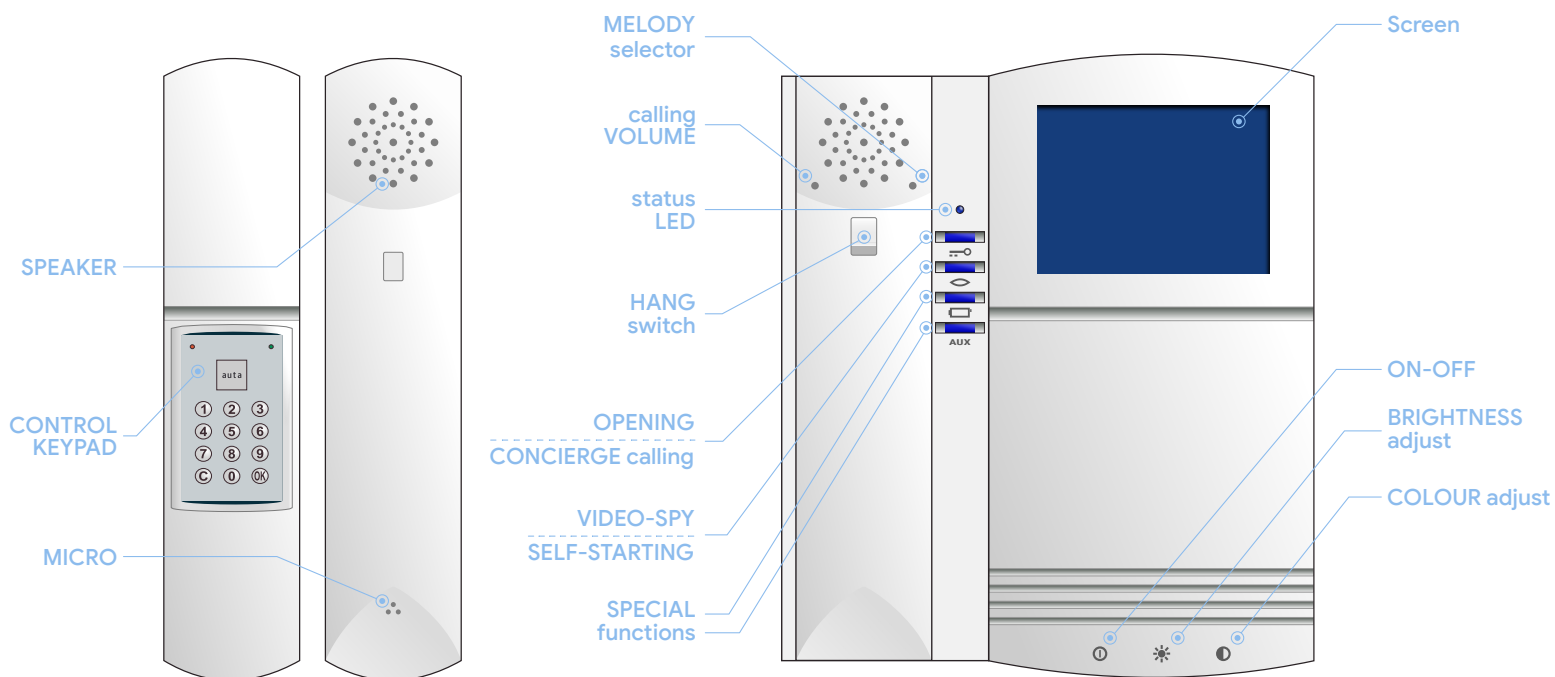

- display 4" LCD HR
- dimensions 195 (wi) x 230 (hi) x 50 (de) mm
- surface mounting
- melody selection
- No. of tones selection
- OSD system (on screen information)
- CCTV SURVEILLANCE function
- DING DONG function (flat bell)
- external functions (lights, garage, etc...)
- INTERCOM up to 15 points

## calling and conversation

When a call is received from the entrance panel, the monitor starts ringing for a maximum of 30 seconds. As standard, it performs 4 rings with intervals of 4 seconds between each of them.


During the call period the image appears on the screen, the user can open directly, pressing the button , or pick up the handset to establish conversation. The conversation has a maximum of 90 seconds. If you want to continue with the conversation, press the button .


## INTERCOM calling

Pick up the handset of the monitor, press the code of the monitor to which you want to make a call then press OK. Press C to rectify. With each press the green LED on the keyboard will flash.


If the monitor you want to call is not available, the keyboard will emit several red flashes and will return to standby.

## self-starting

By pressing the button  the user can establish communication with the PANEL / CCTV CAMERA that he wishes in the case of more than one is present in the installation.

With each press the system will automatically switch to the next device, showing the image and allowing the opening of it by pressing the button .

 
## calling to concierge

If the monitor is in standby, handset is picked up and the button  is pressed, a call will be made to the concierge unit. If the system does not have a concierge unit installed, the monitor will emit an error beep.

## adjust of the calling volume

To adjust the volume of the call, insert a clip or similar through the indicated hole and press with it lightly.


The monitor has two volume levels (MEDIUM and HIGH)



## melody selection

To select a ring tone, you have to pick up the handset and press the hang switch with your finger. With it pressed, a clip or similar must be inserted in the indicated hole and press with it lightly.

 
Each press selects a different melody from 8 ones available.



## ding dong function

The monitor allows to replace the interior bell of the house, this integrates the two calls (outside panel and house bell) in a single device. These calls will be differentiated with different melodies and flashes automatically. In order to have this function, you only have to connect the button of the house bell to the monitor.

## cctv surveillance function

The monitor allows the control of panels and CCTV cameras automatically. Each press on the button  activates a different device. To do this, each CCTV camera must be installed with an Auta digital interface.

## external functions

The monitor has 2 independent push-buttons that allow auxiliary functions, such as garage doors, lights, irrigation, etc ...

To do this, an Auta auxiliary relay must be connected to the control circuit we want to control.