


# auta

ANALOG \_ DIGITAL

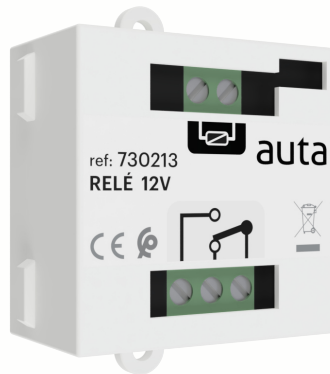


REF. 730213

- ES Relé 12V
- EN Relay 12V
- PT Relé 12V
- FR Relais 12V

**auta**  
Bringing people together

# auta



ANALOG \_ DIGITAL

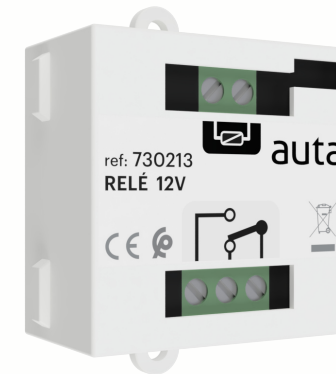


REF. 730213

- ES Relé 12V
- EN Relay 12V
- PT Relé 12V
- FR Relais 12V

 

**auta**  
Bringing people together

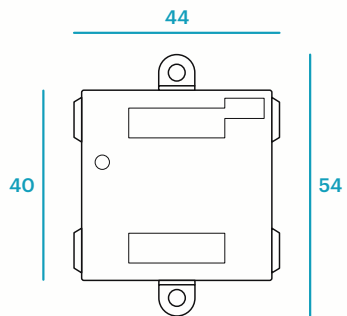


Características Features Características Caractéristiques

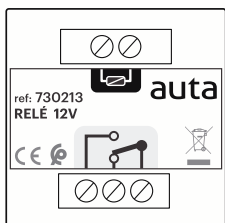

<b>Bobina, terminal 1</b>	Coil, terminal 1
<b>Bobina, terminal 2</b>	Coil, terminal 2
<b>Común _1A</b>	Common _1A
<b>Normalmente Cerrado "N.C." _1A</b>	Normally Closed "N.C." _1A
<b>Normalmente Abierto "N.A." _1A</b>	Normally Open "N.O." _1A

 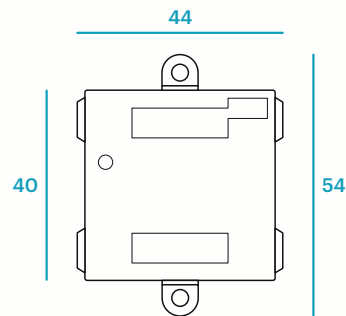

Características Features Características Caractéristiques

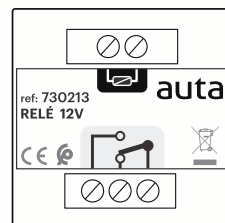

<b>Bobina, terminal 1</b>	Coil, terminal 1
<b>Bobina, terminal 2</b>	Coil, terminal 2
<b>Común _1A</b>	Common _1A
<b>Normalmente Cerrado "N.C." _1A</b>	Normally Closed "N.C." _1A
<b>Normalmente Abierto "N.A." _1A</b>	Normally Open "N.O." _1A

Funcionamiento Functioning Operação Fonctionnement

**1 El relé se activa durante la llamada del terminal**  
The relay is activated during the terminal call  
**O relé é ativado durante a chamada do terminal**  
Le relais est activé pendant l'appel du terminal


**2 El relé se activa al pulsar "AUX"**  
The relay is activated by pressing "AUX"  
**O relé é ativado pressionando "AUX"**  
Le relais est activé en appuyant sur "AUX"

Funcionamiento Functioning Operação Fonctionnement

**1 El relé se activa durante la llamada del terminal**  
The relay is activated during the terminal call  
**O relé é ativado durante a chamada do terminal**  
Le relais est activé pendant l'appel du terminal

**2 El relé se activa al pulsar "AUX"**  
The relay is activated by pressing "AUX"  
**O relé é ativado pressionando "AUX"**  
Le relais est activé en appuyant sur "AUX"


Conexión Connection Ligação Connexion

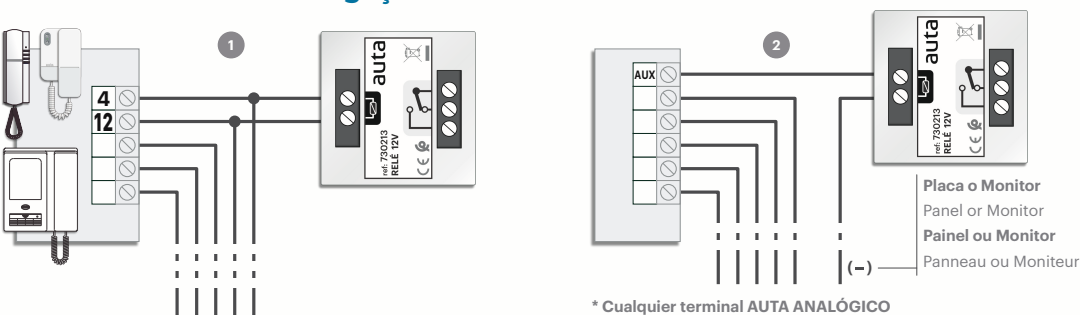

- \* Terminal AUTA ANALÓGICO, llamada ZUMBADOR
- \* ANALOGUE AUTA terminal, BUZZER call
- \* Terminal ANALOG AUTA, chamado CAMPAINHA
- \* Terminal ANALOG AUTA, appelé BUZZER

- \* Qualquer terminal AUTA ANALÓGICO
- \* Any ANALOGUE AUTA terminal
- \* Qualquer terminal ANALOG AUTA
- \* Tout terminal ANALOG AUTA

Conexión Connection Ligação Connexion

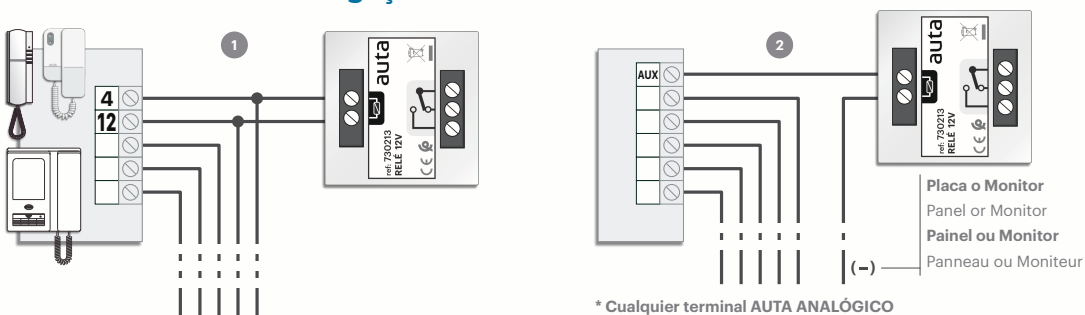

- \* Terminal AUTA ANALÓGICO, llamada ZUMBADOR
- \* ANALOGUE AUTA terminal, BUZZER call
- \* Terminal ANALOG AUTA, chamado CAMPAINHA
- \* Terminal ANALOG AUTA, appelé BUZZER

- \* Qualquer terminal AUTA ANALÓGICO
- \* Any ANALOGUE AUTA terminal
- \* Qualquer terminal ANALOG AUTA
- \* Tout terminal ANALOG AUTA