





# NEOS DIGITAL handset

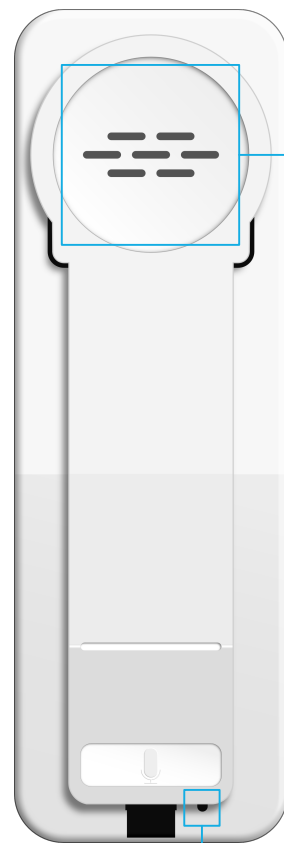

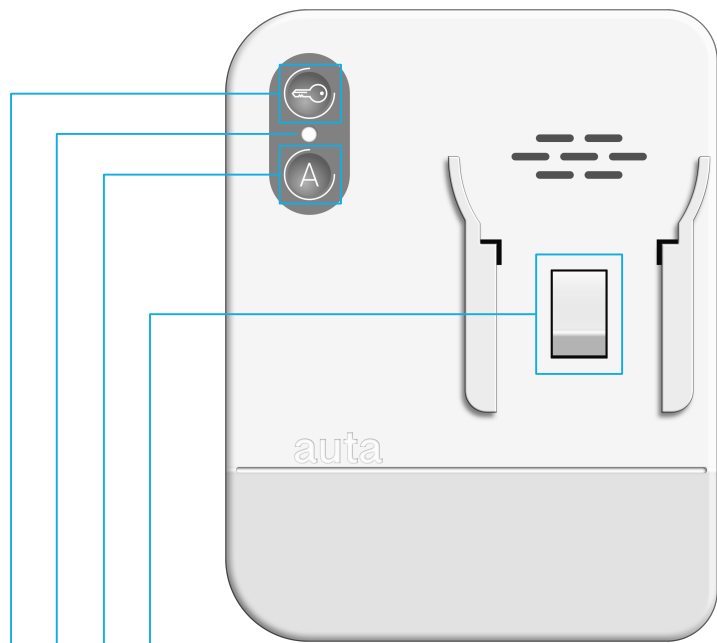

- Opening \_ Call to concierge
- Status LED
- Auxiliary \_ Self-starting \_ Melodies-Call volume
- HANG switch


- Microphone
- Speaker

## calling and conversation

When a call is received from the entrance panel, the phone starts ringing for a maximum of 30 seconds. As standard, it performs 4 rings with intervals of 4 seconds between each of them.


During the call period, the user can open directly by pressing the button , or pick up the handset to establish a conversation. The conversation has a maximum of 90 seconds. If you want to continue with the conversation, press the button .

## self-starting


In standby, picking up the handset and by pressing the button  the user can establish communication with the PANEL. In the case of more than one panel is present in the installation the system will do the self-starting to the last one from which it receives a call.

Once the communication is established, an opening can be made by pressing the button .

## calling to concierge

In standby, if the handset is picked up and the button  is pressed, a call will be made to the concierge unit. If the system does not have a concierge unit installed, the phone will emit an error beep.

## adjust of the calling volume and melodies

In standby, press . With each press will select a different melody and a different calling volume. There is 4 call melodies and 2 volume levels for each one (MEDIUM and HIGH)

## ding dong function

The phone allows to replace the interior bell of the house, this integrates the two calls (outside panel and house bell) in a single device. These calls will be differentiated with different melodies and flashes automatically. In order to have this function, you only have to connect the button of the house bell to the phone.

## external functions

The phone has 1 push-button  that allow auxiliary functions, such as garage doors, lights, irrigation, etc ...

The "auxiliary" mode will be active during a calling from an external panel or a conversation.

An Auta auxiliary relay must be connected to the control circuit we want to control.