




Being at "System info" press:

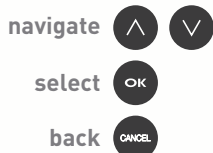

Assign outputs, for AUX | 📞

- aux | bell** :button standard (-24Vdc, 1 second when pressed) output standard (-24Vdc, every call tone)
- 2C | bell** :button 2nd camera mode (-24Vdc, mode ON_OFF) output standard (-24Vdc, every call tone)
- aux | 2C** :button standard (-24Vdc, 1 second when pressed) 2nd camera mode (-24Vdc, mod3 ON_OFF)
- aux ↑↓** :time, in tenths, button (0 mode ON_OFF)
- 2C ↑↓** :time, in tenths, button (0 mode ON_OFF)



Function open, for 🚪 | 🔔

- open | bell** :button opens the door
button Ding-Dong flat, (-24Vdc)
- OFF | open** :button disabled
input opens the door (-24Vdc)
- open | open** :button opens the door
input opens the door (-24Vcc)

If we select the function "Open" we'll disable the function "Panic" and opposite.



* Panic AVANT monitor

Panic function, for SOS* (🚪) | 🔔

- 2C | bell** :button mode 2nd camera (-24Vdc, mode ON_OFF) input Ding-Dong flat (-24Vdc)
- panic | bell** :button sends a panic call to CCI
input Ding-Dong flat (-24Vdc)
- OFF | panic** :button disabled
input Ding-Dong flat (-24Vdc)
- panic | panic** :button sends a panic call to CCI
input sends a panic call to CCI (-24Vdc)



Codes


It allows inserting third-party advertising previously programmed in the factory.

Monitor AVANT DIGITAL.

Special functions_2 (v.160111 or later)



Being at "System info" press:

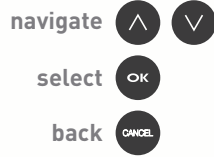

Functioning modes

Standard mode :the monitor works normally as indicated in its installation manual.

Screen mode :The monitor screen always stays on, allowing its use in exhibitions. Perform all other functions as standard.

SELECTING THE SCREEN MODE THE MONITOR BUTTONS WILL BE DISABLED.